




**KAOKO™ THROTTLE STABILIZER KITS:
SUZC109 • C109SNUB**

**For Models SUZUKI
BOULEVARD C109R (2008) ♦ VLR1800 T**


RSA Registered Designs
No. A2007/00202 No. A2007/00205
No. A2007/00203 No. A2007/00206
No. A2007/00204 No. A2007/00207

Patents
"U.S. Pat. No. US D593,462 S"
"U.S. Pat. No. US D593,463 S"
"U.S. Pat. No. US D593,464 S"


Items Included in your kit
Kaoko bar-end weight/s • Friction Nut • Thrust Washer/s • 2mm Allen Key
Fitting Instructions

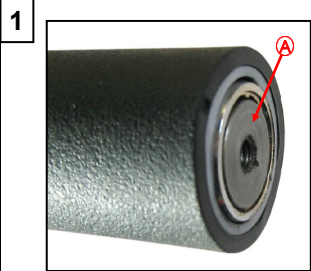

1 **A** — OEM Bar-end weight removed

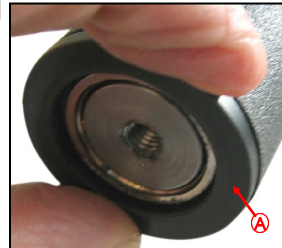

2 **A** — Plastic Thrust Washer

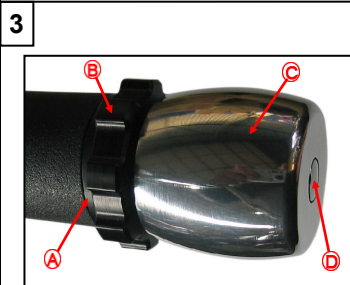

3
A — Plastic Thrust Washer
B — Friction Nut & Grub Screw
C — Kaoko Bar-end weight
D — OEM Chromed Plastic plug

DISCLAIMER: NO RESPONSIBILITY ACCEPTED FOR NON-ADHERENCE TO THESE INSTRUCTIONS

KAOKO™ Safety Warning:

The KAOKO™ Throttle Stabilizer is an aftermarket accessory. Any misunderstood, abused or incorrectly installed motorcycle accessory is a safety hazard that could cause injury or death. It's the rider's responsibility to understand the operation and purpose for which the KAOKO™ Throttle Stabilizer is designed, namely, for cruising, only when safe to do so. At all other times the control should be disengaged. The KAOKO™ Throttle Stabilizers are to be used only by experienced and responsible riders. See reverse of page for full indemnity.

Note: An adjustment to throttle assembly position may be necessary to suit KAOKO™ Throttle Stabilizers. The throttle assembly position on aftermarket bars, and some OEM bars, is adjustable. The assembly can marginally be re-positioned along the handle bars slightly loosening the throttle assembly clamp screws, and then sliding the throttle assembly along the handle bars (left or right). Once done, firmly tighten the clamp screws to OEM torque specifications. This adjustment is generally not necessary.

Fitting Instructions

Step 1
Completely remove right hand side (RHS) and left hand side (LHS) bar end weights as shown in picture 1. Note: The stock M6 Cap screws each have a chromed plastic cap pressed into the cap heads. These must be carefully prized out using a thin blade and retained for use on the KAOKO™ kit screws. See picture 3.

Step 2
For **Right Hand Side Kit Assembly**, place the plastic thrust washer onto the end of bar as shown in Picture 2 then firmly fasten the KAOKO™ end weight onto throttle end as shown in picture 3. Use a mild thread locking adhesive.

Note: To enable improved functionality, it is recommended (not essential) to apply very light smear of Automotive grease or Petroleum jelly to the friction face of the thrust washer(See Figure 3 at the back of the page)

Step 3
Back off the friction nut against the body of the bar weight to disengage the Throttle Control.

Step 4
Carefully set rotational resistance of the friction nut by tightening/loosening the grub screw by small adjustments using the 2mm allen key provided in the Kaoko Kit. Take care not to over tighten risking damage to threads. The nut should have fairly firm rotational resistance. See under **Maintenance below**.

Step 5
For **Left Hand Side Kit**, there must be no thrust washer and the KAOKO™ end weight is simply tightened in place. Use a mild thread locking adhesive.

Step 6
Replace chromed caps into screw heads. See Picture 3.

Operating Instructions

The Friction Nut has a **left hand thread**. In readiness for engagement, the Friction Nut must be adjusted so that it makes light contact against the thrust washer.

To Engage: While rolling on the throttle, the Friction Nut can be gripped between the small finger and palm of hand. This action tightens the nut and provides sufficient friction to set the throttle to the desired opening.
(The friction is such that the rider may still open and close the throttle. The throttle simply has a slight rotational stiffness.)

To Disengage: While rolling off the throttle, grip the Friction Nut between small finger and palm of hand.
VERY IMPORTANT!! The throttle should open and snap closed freely when correctly disengaged.
Note: The Grub Screw needs to be set to provide the necessary resistance on the thread of the friction nut (only small adjustments need to be made as to not damage the friction nut threads). This may be adjusted periodically to take up wear.

Maintenance: Remove kit annually. Unscrew Friction Nut and brush clean threads with a mild soap. Apply petroleum jelly to threads and assemble. Adjust grub screw to desired operating resistance. (O-Ring cushion: 19.6mm I.D. x 2.4mm section — if replacement is required)